



A Point of the Breastbone (or sternum). This is the central neck base - find the indentation near the base of the windpipe. This is your reference point when measuring your dog

B Neck Measurement. This is **NOT** a collar measurement. Start at the point of the breastbone “A” and pull the tape snugly around the base of the neck and back to the point of the breastbone. Do **NOT** measure half and double up. If you are unsure, please watch the measuring video.

C Measure your dog around the ribcage. Take the tape measure just behind the front legs (making sure that there is clearance of your dog’s armpits) and take the tape measure the whole way around the rib cage. Do **NOT** measure half and double up.

D This measurement is **ONLY** required for custom fit harnesses. Take the tape measure from the point of the breastbone and measure between the legs, to just behind the front legs of the dog. Make sure that you allow enough room so that the harness does not sit in the arm pit of the dog.

Measuring Tips

We want you to have the best fitting harness possible so accurate measuring should aid this.

- Do not guess measurements or base size choices on another company’s sizes. Xtra Dog measurements are **NOT** the same as any other manufacturer of harnesses.
- Measure your dog, not fur, especially on long haired breeds. Dig your fingers into the fur to find the reference points.
- Make sure your dog is standing square, get help if your dog fidgets.
- Pull the tape and measure snugly.
- If unsure how to measure your dog, please watch the video

To Correctly size your dog, measure him or her behind the front legs around the rib cage and neck (Start at POINT OF BREASTBONE and pull tape snugly around base of the neck and back to POINT OF BREASTBONE. Go all the way around neck and back. **THIS IS NOT A COLLAR MEASUREMENT, if you are unsure where to measure please watch video <http://xtdog.me/measure>**. Your harness should fit snugly but not tight. Allow two finger width all of the way around. The legs are adjustable left and right.

FLEECE	Rib Cage	Neck
Size Petite	26-31cm	26cm
Size XXS	36-45cm	36cm
Size XS	42-54cm	37cm
Size S	43-61cm	42cm
Size S-Md	45-64cm	46cm
Size M	50-69cm	58cm
MD	56-75cm	61cm
Size ML	62-91cm	67cm
Size L	64-93cm	73cm
Size XL	72-103cm	73cm
Size XXL	92-125cm	96cm

FOAM	Rib Cage	Neck
Size XS	49-61cm	43cm
Size S	53-81cm	48cm
Size S-Md	58-85cm	51cm
Size M	68-96cm	58cm
Size MD	67-98cm	61cm
Size ML	66-93cm	75cm
Size L	75-125cm	75cm
Size XL	88-145cm	78cm
Size XXL	98-137cm	81cm

Custom Fit Harness

Some Dogs do not fit our standard sizes, especially some cross breeds. For these we offer a custom fit service. Please note that any custom fit harness is made especially for your dog and cannot be returned or exchanged. This does not effect your statutory rights.

Key
 XXS - XXSmall
 XS - XSmall
 S - Small
 S-Md - Small Medium
 M - Medium
 MD - Medium Deep
 L - Large
 ML - Medium Large
 XL - XLarge
 XXL - XXLLarge

Measuring Your Dog for a Custom Fit

Measure your dog around the neck from the breast bone, all the way around the dog's head at the widest point. Measure the dog from the breast bone - 10cm behind the dog's front legs (where you want the girth strap to sit on the dog. Make sure it is not too close to the legs). Tell us age, breed and weight of dog. When measuring make sure you measure dog not fur. Measure 4-5 times and give us the middle measurement. Make sure your dog is standing square. Try and get help measuring your dog.

Please be aware that the breed chart below is based on experience fitting harnesses and is NOT a definitive breed guide as every dog is different.

Please measure your dog and refer to the chart above for an accurate fit. Do NOT rely on breed chart below!

Should you have the wrong size harness, you may send it back and we will swap it - . Please make sure all labels are left on and the harness is in a CLEAN re-sellable condition. This does not affect you statutory rights. Returns forms can be found at www.xtradog.com/returns

FLEECE WALKING HARNESSSES

Additional Front Rings as Standard

11 standard sizes

Custom fit made to measure option

Multiple colour options

Matching fleece training leads



... I love these harnesses as they give me more choices when working with client's dogs that are sensitive or suffering from medical conditions that may prevent me from using nylon harnesses. The ring on the front of the harness enables me to influence the posture of the dog by teaching the dog how to move his centre of gravity back into balance in keeping with the TTouch ethos. Having two points of contact (i.e., back and front ring) is key to teaching dogs to move in balance by their handler's side and many owners are stunned at the instant effect two points of contact has on their dog's posture and behaviour when on the lead."



Sarah Fisher -
 TV Personality, Writer, Dog Trainer and
 Tellington TTouch instructor



"World's Most Comfortable Dog Harness"

British Made

Designed by Marie Miller
 (member of the APDT no. 0130 and
 TTouch Guild) inspired
 by Mel Fishback-Riley's harness
 designs of the 1950s

Need Help Measuring? Checkout our measuring video
<http://xtdog.me/measure>

Sled and Working Range

Made by

Foam X-Back Racing Harness

Multi-Sport Range

Order by neck size, Small (35-40 lbs), Medium (43-48 lbs), Large (50-55 lbs), Extra Large (60-75 lbs), or Extra Extra Large (75-90 lbs), Extra Extra Extra Large (90-120 lbs). If in doubt, use our measuring guide for ZIMA x-back harnesses and e-mail us the neck diameter starting at the point of breastbone and going all the way completely around the neck and back to the point of breastbone, weight is important, and breed of dog. We are happy to help.



Fleece and Foam X-Back Range

STANDARD SIZES

These standard sizes fit most racing dogs but we are happy to compare your measurements and decide if a custom harness is in order. The following list describes each of our standard sizes:

EXTRA SMALL (XS) for 30 pound dogs with 16" necks and 24" lengths. Padding colour for standard harnesses is grey.

SMALL (S) for light racing dogs in the 35-40 lb range measuring approx 18" in the neck and 25.5" in length. Padding colour is red.

SMALL MEDIUM (SM) for longer bodied and more slender racing dogs in the 40-45 lb range measuring 18" in the neck and about 27" in length. Padding colour is blue.

MEDIUM (M) for the blockier racing dogs, many of the smaller Siberians will wear this harness or dogs with thicker hair and necks in the 43-48 lb range measuring approx 19" in the neck and 26.5" in length. Padding colour is green.

MEDIUM EXTRA LONG (MXL) for lean rangey racing dogs, 45-50 lbs, small males or many of the females wear this one, measuring 19" necks and 27" in length. Padding color is black.

MEDIUM LARGE (ML) for slightly heavier long bodied rangey dogs, typically the racey 50 lb males or larger racey females in the 48-54 lb. range measuring 19" necks and 28" in length. Padding colour is red.

LARGE (L) for blockier racing dogs like many of the male sibes or dogs with thicker coats and necks measuring 21" and 28" in length weighing 50-55 lbs. Padding colour is blue.

LARGE EXTRA LONG (LXL) for longer bodied rangey dogs 55-60 lbs

Fleece Multi-Sport Harness

 


measuring approx 21" necks and 29.5" in length. Padding colour is green.

EXTRA LARGE (XL) for the large full bodied dogs or dogs that are heavily furred measuring 23" necks and 31.5" in length and weighing in the 60-75 lb range. Padding color is grey.

EXTRA EXTRA LARGE (XXL) for the even bigger dogs weighing in at 75-90 lbs and measuring 27" necks with 22.5" long bodies. Padding colour is red.

EXTRA EXTRA EXTRA LARGE (XXXL) for the giants, weighing in at 90-120 lbs and measuring approx 31" necks and 34.5" in length. Padding colour is black.

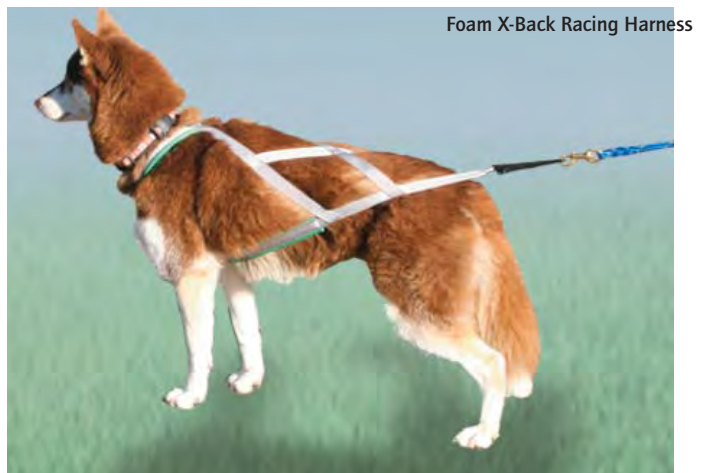

Fleece X-Back Racing Harness

 


Adanac Sleds and Equipment

ZIMA Harness Information Guide



(Piper being properly fit for x-back harness)

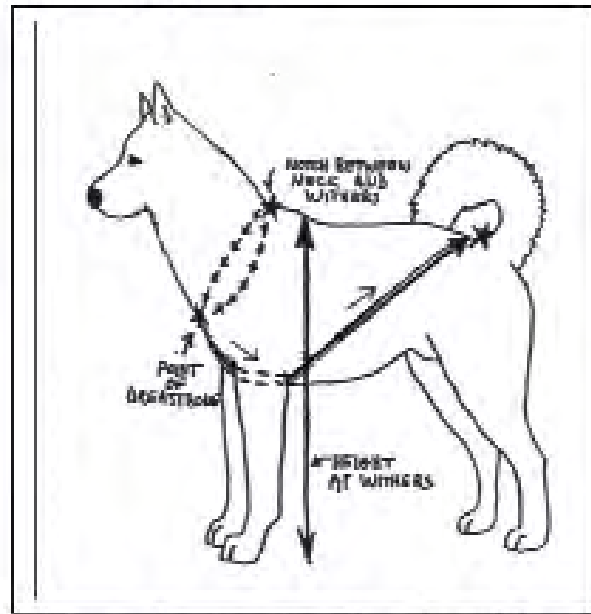

(diagram showing point of breastbone & length points)

Measuring for a Harness

1. **Neck measurement.** Find the point of breastbone on the dog (central neck base—find the indentation near the base of the windpipe—start there). Pull tape measure snugly from point of breastbone completely around the base of the neck (see diagram) and back to the starting point.
2. **Length measurement.** Start at the same point of breastbone of dog. Pull tape measure from point of breastbone straight down the breastbone, between the front legs, and continue by angling across the rib cage, and up to the base of the tail.
3. **Dog's weight.** Note whether the dog is heavy or lean.
4. **Dog's breed.** Note whether coat is thick, medium, or thin.
5. **Dog's age,** especially if it is a young dog.

Tips for Measuring

1. Accuracy is important so you get a harness that fits properly and distributes the weight correctly.
2. Don't guess at weight. Weigh the dog, if possible.
3. Have someone help you measure, if possible.
4. Measure dog NOT hair.
5. Make sure dog is standing square and firm.
6. Dig fingers through the coat to find the reference points.
7. Pull tape measure snugly

Care of your Harness

1. Wash your harnesses in cold water and mild soap.
2. Never dry them in a dryer because webbing will shrink. Air drying is best.
3. Check the webbing from time to time to make sure it hasn't been chewed or worn.

